

### Loctite® Soft Press Hand Held Pneumatic Applicator Item Number: 250052

#### Air Supply:



Seal thread (G ¼) with PTFE tape.  
Attach gasket and air line adapter.



#### Package Preparation:



Remove tip of package with  
a pair of sharp cutters.



Remove front barrel cap from  
applicator and insert nozzle.  
Cut nozzle at desired position  
and angle with a sharp knife.



Place the open package  
into the barrel.



Replace front cap and ensure  
a tight fit to barrel.

#### Dispensing Material:



Rotate knob counterclockwise  
to reduce material flow. Turn  
knob clockwise to increase flow.



Squeeze trigger fully to  
dispense material. Release  
trigger to stop flow.

**Henkel Corporation**  
One Henkel Way  
Rocky Hill, CT 06067-3910

**Henkel Canada Corporation**  
2515 Meadowpine Boulevard  
Mississauga, Ontario L5N 6C3  
Canada

**Henkel Capital, S.A. de C.V.**  
Calzada de la Viga s/n Fracc. Los Laureles  
Loc. Tulpetlac, C.P. 55090  
Ecatepec de Morelos, Edo. de México

**Henkel Corporation**  
**Automotive / Metals HQ**  
32100 Stephenson Hwy.  
Madison Heights, MI 48071

**Henkel Ltda.**  
Rua Karl Huller, 136 – Jd.  
Canhema 09941-410  
Diadema/SP, Brazil

[www.equipment.loctite.com](http://www.equipment.loctite.com)  
[www.loctite.com](http://www.loctite.com)

® and ™ designate trademarks of Henkel Corporation or its affiliates. ® = registered in the U.S. and elsewhere. © Henkel Corporation, 2013. All rights reserved. Data in this operation manual is subject to change without notice.  
Manual P/N: 8904057, Rev A, Date: 11/15/2013