


OPERATING INSTRUCTIONS


Step 1: Open back cover



Step 2: Insert bottle in the dispenser

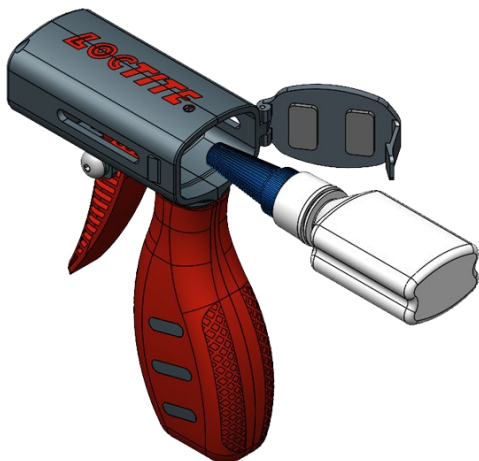

Step 3: Close back cover

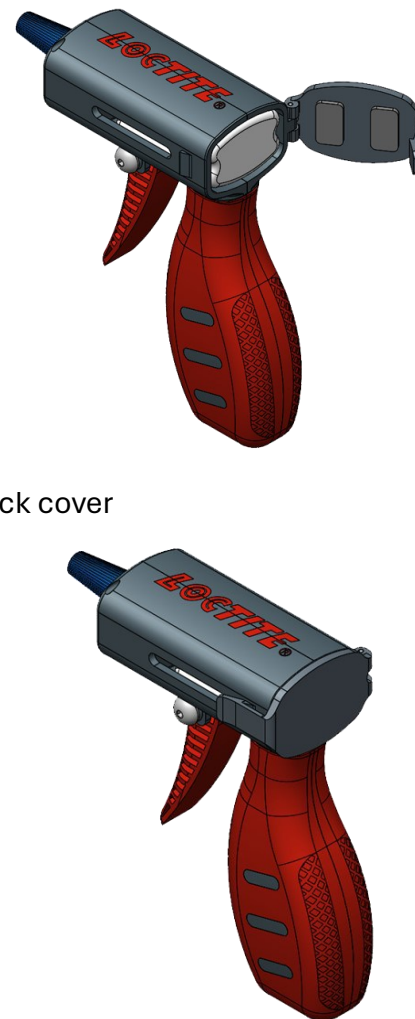


Step 4: Remove bottle cap by turning it counterclockwise



Step 5: Add dispense tip on the bottle



Step 6: Squeeze trigger to dispense adhesive out of the bottle

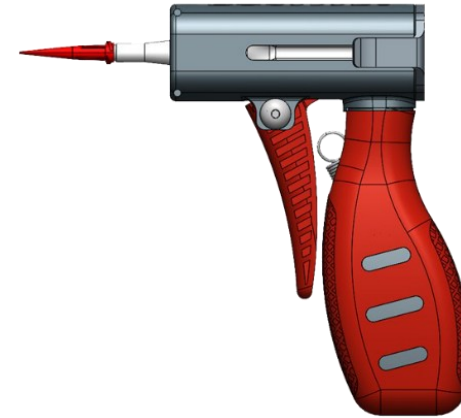

ADDITIONAL INFO:

- The Cyanoacrylate Hand Pump can be rested on its back in between uses. For prolonged storage or replacing the bottle, it is recommended to put the cap back on the bottle

